

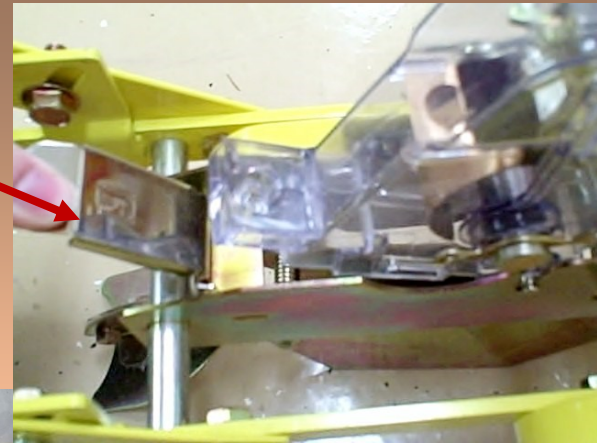


**Release the Hopper by
pushing down the #JP69 Lever**

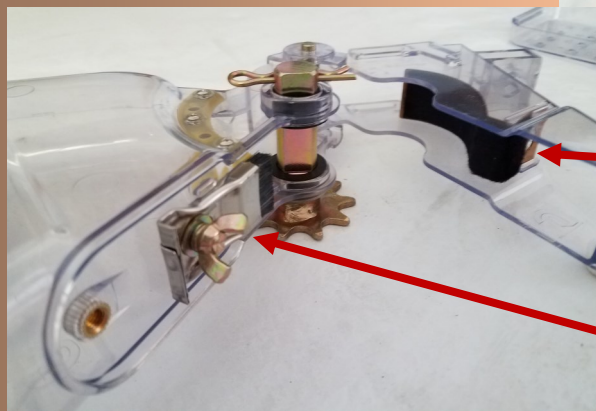

**Unscrew the Knob
on the Hopper**

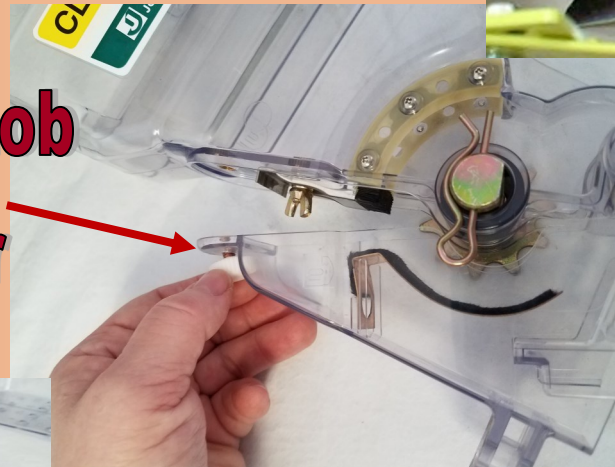

Slip the #JP50 Guide Plate into two slots

Loosen the wing nut to change the #JP53 Brush