



MECHANICAL TRANSPLANTER COMPANY

JPN FERTILIZER ASSEMBLY INSTRUCTIONS

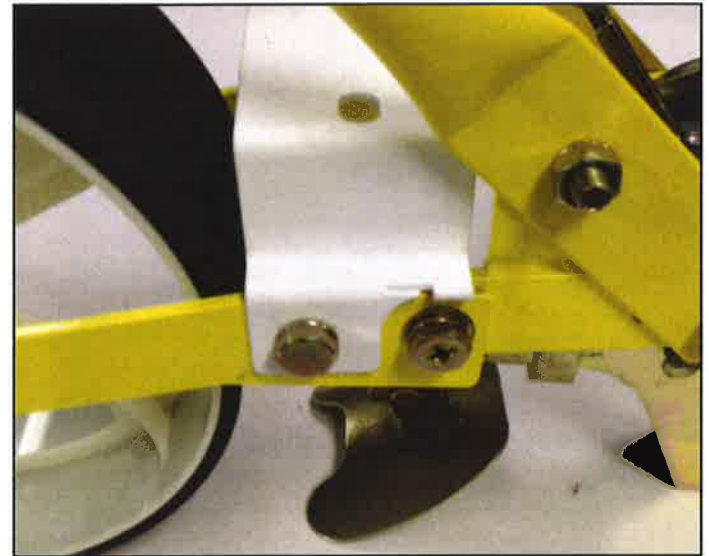

1. Use a 13 mm wrench to attach Bracket A to seeder using existing bolts from seeder frame as shown.

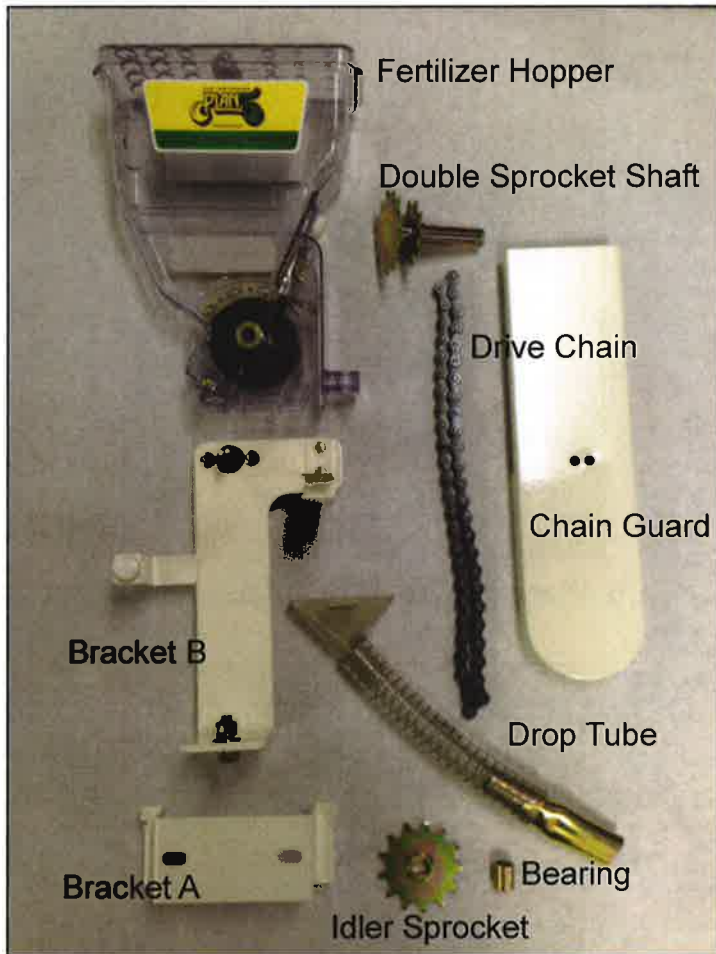

2. Attach Bracket B to Bracket A.
Do not tighten completely.



3. Remove seed hopper sprocket and replace with double sprocket shaft.




4. Place bearing on fertilizer hopper shaft.



5. Place fertilizer idler sprocket on shaft.



6. a. Place drive chain on both sprockets.
b. Pull back on Bracket B until chain is tight. Tighten Bracket B to Bracket A.

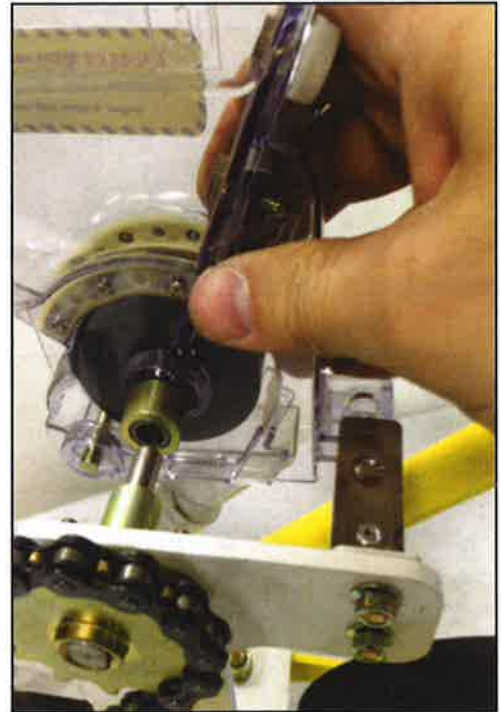

7. Install fertilizer hopper by sliding onto drive shaft and into holding clip.
8. Install drop tube in the bottom of hopper and place in desired location.
9. Install chain guard.

MECHANICAL TRANSPLANTER COMPANY, LLC

1150 Central Avenue * Holland, MI 49423

Phone: 616-396-8738 * Fax: 616-396-3619

website: www.mechanicaltransplanter.com * e-mail: mtc@egl.net